


## Product code: ONE182-WH Commercial Downlight



1. Installation: Must be carried out by a qualified electrician in accordance with local electrical and safety regulations.
2. Electrical: 220-240V~ 50/60Hz. For indoor use only.
3. Mounting Surface: Minimum 3mm thickness. Cut required hole in ceiling before installation. Ensure surface can support the luminaire weight.
4. Damaged Product: Do not operate if damaged.

### Installation Instructions

1. Ensure mains power is disconnected and cannot be reconnected during installation (Figure 1).
2. Cut the required hole using suitable tools. Ensure it can support the downlight; reinforce if necessary (Figure 2).
3. For CCT adjustable models, set the desired colour temperature before installation (Figure 3).
4. Connect mains cable: L (brown), N (blue) to terminals. For Class I, connect earth (green/yellow). Class II requires no earthing.
5. Remove the downlight from the box and connect it to the driver using the provided connection system.
6. Raise the springs and insert the downlight into the cut-out. Ensure the driver and mains cable are not trapped (Figure 4).
7. Push the downlight fully into the aperture until the outer flange is flush with the ceiling surface (Figure 5).

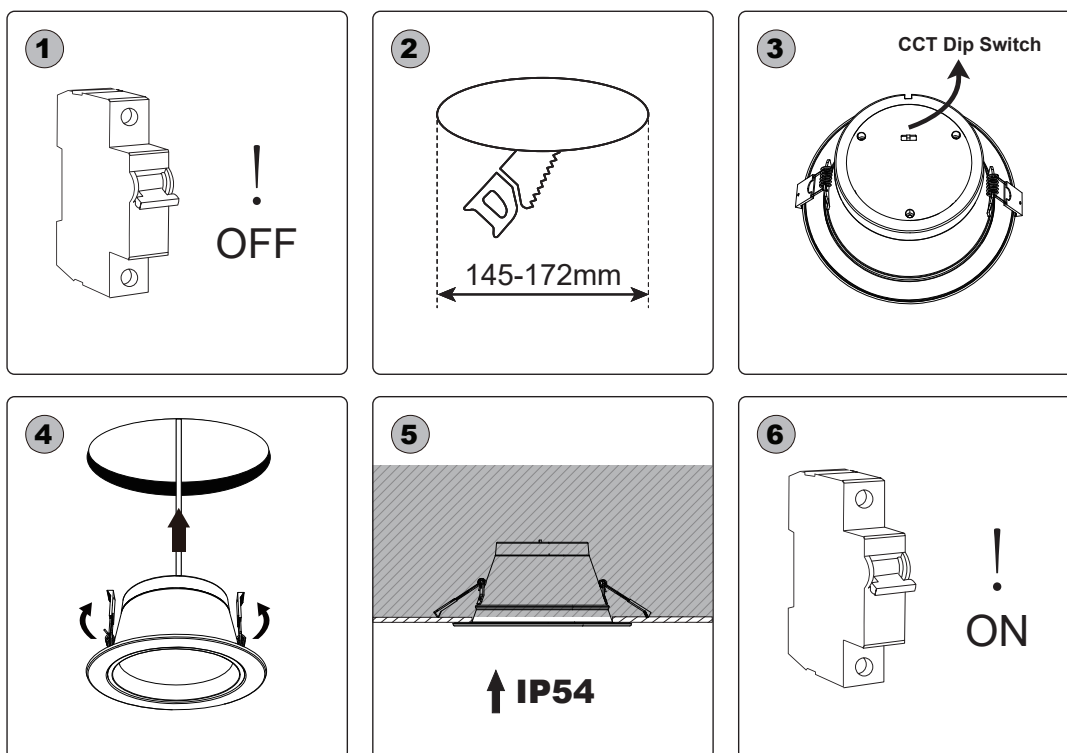

### Warranty

The product is covered by a 5-year warranty from the date of purchase. Any defective product confirmed by us will be replaced free of charge, but we shall not be liable for any consequential losses or installation costs. This warranty is valid only if the product remains unmodified and is installed and used in accordance with the instructions.